2-SLOT STAINESS STEEL TOASTER

Model: SO-337T

INSTRUCTION MANUAL

Thank you for your purchase.
Please read this instruction manual thoroughly and keep in a safe place for future reference.

IMPORTANT SAFETY INSTRUCTIONS

1. Close supervision is necessary when the appliance is used by or near children.
2. CAUTION! If a foreign object falls or becomes lodged in the toasting slots, immediately press the CANCEL button and unplug the unit.
3. Do not immerse any part of the appliance or cord in water or any other liquid, electrical SHOCK may occur.
4. As the unit can become very hot when toasting, use caution to avoid personal injury.
5. Avoid using this appliance on or near flammable materials.
6. Do not leave the appliance unattended when in use.
7. Always use the appliance on a dry, level surface. Do not use the appliance on an unstable surface that is not heat resistant, near heat sources, or where water can come in contact with the appliance.
8. This product is intended for indoor use only. Do not attempt to use this appliance outdoors.
9. When cleaning, or if the product will not be in use for an extended period of time, unplug the unit and store in a cool, dry place.
10. Should the power supply cord or plug become lost or damaged, it must be replaced with a cord manufactured by Sunpentown.
11. Do not place this appliance on or near a hot gas or electric burner, in or where it could touch a heated oven, or a microwave oven.
12. Do not use harsh abrasives, caustic cleaners or oven cleaners when cleaning this appliance.
13. When using this appliance, allow adequate space above and around for air circulation.
14. Do not use the toaster without the removable crumb tray in place. The crumb tray should be cleaned regularly. Buildup in the crumb tray prevents adequate air circulation, which may lead to damage of the product.
15. Do not place an item whose width is larger than the toasting slots into the toasting slots. This may cause the food to become stuck, and/or damage to the appliance.

16. If the appliance is damaged or malfunctioning, contact Sunpentown for service or repair.

WARNING

Never attempt to extract jammed toast, muffins, bagels, etc. with a knife or other metal object, as contact with the elements may cause electric SHOCK. Allow the appliance to cool completely, unplug the power cord from the outlet, and then carefully remove the bread.

PARTS IDENTIFICATION

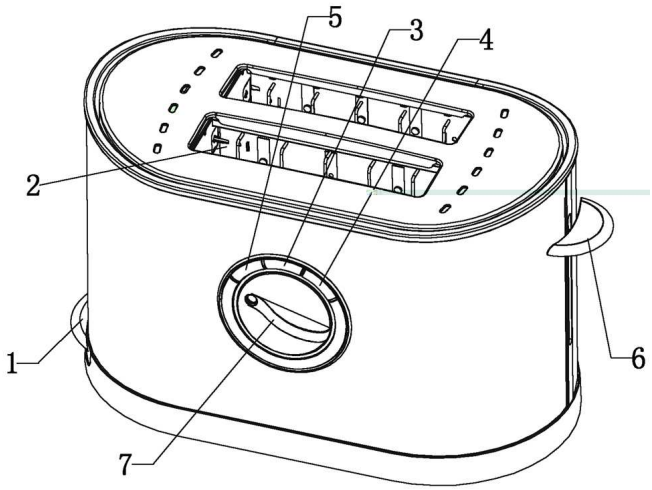

1. Removable crumb tray.
2. Variable width toasting slots.
3. Cancel button.
4. Reheat button.
5. Frozen button.
6. Carriage control lever.
7. Electronic variable browning control (7 browning levels)

OPERATING THE TOASTER

1. Plug the toaster cord into a grounded electrical outlet and switch toaster on. Ensure the crumb tray is free of crumbs and securely in place, and nothing is in the toaster slot.

2. Insert up to two slices of bread, muffins, or bagels into the slots. CAUTION! Attempting to insert a food item larger than the toaster slots can cause the food item to jam, and may lead to damage of the unit and/or personal injury.

3. Press the carriage control lever down until it clicks into place. Toasting cycle will automatically commence.
   Please note: if the toaster is not plugged in and switched to the on position, the carriage control lever will not click into place.

4. Turn the browning control knob to desired setting: 1(lightest) to 7(darkest). Adjustment of the browning control knob can only be adjusted after the carriage control lever clicks into place and the toasting sequence has begun.

Personal preference and varying types of bread and their moisture level may require a different browning setting. For example, dry bread will brown more rapidly than moist bread and will require a lighter setting. Bagels and muffins usually require higher setting due to their firm texture and high density.

5. When the toasting cycle is finished, the toaster will turn off and toast will be raised automatically. The toasting process can be stopped at any time by pressing the cancel button.

TOASTING FROZEN BREAD

To toast frozen bread, place the bread into the bread slots. Press the carriage control lever down until it clicks into place, select the desired Browning Setting, and then press the Frozen Button.

REHEATING TOAST

The toaster allows you to reheat toast without additional toasting. To reheat, place toast into bread slots, lower the carriage control lever until it clicks into place and press the Reheat Button.

In the unlikely event that the bread or crumpet becomes jammed, press the cancel button, unplug the power supply, and then carefully ease the bread out of the toaster, ensuring that you do not damage the element.

CARE AND CLEANING

1. ALWAYS allow the unit to cool completely, and then unplug the power cord from the outlet before any cleaning or maintenance.
2. When cleaning the crumb tray:
    - slide out the crumb tray from under the toaster
    - dispose of crumbs
    - replace back in the toaster before using it again
3. When cleaning the body of your toaster, use a soft cloth. Do not immerse the unit in water.
4. To clean the interior, turn the toaster upside down over the sink and shake crumbs free. Do not allow the power cord to dangle into the sink, as this may cause the cord to become wet.

The crumb tray should be cleaned after each use. Do not allow breadcrumbs to accumulate in the bottom of the toaster.

SPECIFICATIONS

Model number	SO-337T
Rating	120V / 60Hz
Power consumption	800W
Unit weight	3.50lbs
Unit dimension	13.11”L x 7.36”W x 8.19”H

Your Guarantee

If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired free of charge.

This guarantee is subject to the following terms:

- Sunpentown must be notified of the fault.
- Proof of purchase must be presented to Sunpentown's nominated representative.
- The warranty will be void if the product if modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned.
- Parts, which are replaced, become the property of Sunpentown.
- The warranty applies for the use of the product in the USA only.

What is NOT COVERED:

- Warranty does not include freight charges.
- Incidental or consequential damage caused by possible defects with this product.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.

This GUARANTEE is in addition to your Statutory Rights

Sunpentown Int'l Inc.

21415 Baker Parkway, City of Industry, CA 91789-5236

Tel: 909-468-5288 · Fax: 909-468-5279

service@sunpentown.com · www.sunpentown.com